

## Wall Direction

**Screen:** [Create Rooms - Single Tab](#)

[Create Rooms - Walls](#)

**Default Value:** 0 deg (North)

**Limits:** 0 to 360 deg

Enter the direction the wall is facing in degrees East of North - see the figure below.

North	0 deg
East	90 deg
South	180 deg
West	270 deg

This entry affects the sol-air temperature of the wall surface and the amount of solar heat gain into the room.

### Definition of Wall Direction

In the plan view below, Wall 1 faces Northeast (Wall Direction = 45 deg) and Wall 2 faces Southwest (Wall Direction = 225 deg.)

