

Power Meter 710

Reference Manual


63230-501-209A1

Instruction Bulletin



HAZARD CATEGORIES AND SPECIAL SYMBOLS

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.

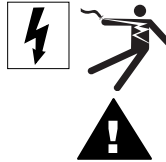

The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **can result in** death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **can result in** minor or moderate injury.

CAUTION

CAUTION, used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, **can result in** property damage.

NOTE: Provides additional information to clarify or simplify a procedure.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SECTION 1: INTRODUCTION	Power Meter Hardware	1
	Power Meter Parts and Accessories	2
	Box Contents	2
	Firmware	2
SECTION 2: SAFETY PRECAUTIONS	Before You Begin	3
SECTION 3: OPERATION	Operating the Display	5
	How the Buttons Work	5
	Menu Overview	6
	Setting Up the Power Meter	7
	Set Up Power Meter	7
	Set Up CTs	8
	Set Up PTs	8
	Set Up System Frequency	8
	Set Up Meter System Type	9
	Set Up Demand Current	9
	Setup PQS Demand	10
	Set Up Passwords	10
	Set Up Communications	11
	Set Up Bar Graph Scale	11
	Set Up Meter's Visualization Mode	11
	Resetting the Power Meter	12
	Initialize the Meter	12
	Reset Individual Values	12
	Viewing Meter Information	13
SECTION 4: METERING	Power Meter Characteristics	15
	MODBUS RS485	16
	Min/Max Values for Real-time Readings	16
	Power Factor Min/Max Conventions	16
	Demand Readings	16
	Demand Power Calculation Methods	17
	Peak Demand	19
	Demand Current Calculation Methods	19
	Energy Readings	19
	Power Analysis Values	20
SECTION 5: MAINTENANCE AND TROUBLESHOOTING	Introduction	21
	Get Technical Support	21
	Troubleshooting	21
APPENDIX A: SPECIFICATIONS	Power Meter Specifications	23
APPENDIX B: REGISTER LIST	Register List	25
	Supported MODBUS Commands	36
APPENDIX C: INSTRUMENT TRANSFORMER WIRING: TROUBLESHOOTING GUIDE	Section I: Using this Guide	37
	What is Normal?	37
	Section II: Common Problems for 3-Wire and 4-Wire Systems	38
	Section III: 3-Wire System Troubleshooting	39
	Section IV: 4-Wire System Troubleshooting	40
	Field Example	42
GLOSSARY	43
	Terms	43
	Abbreviations	45
INDEX	47

SECTION 1— INTRODUCTION

POWER METER HARDWARE

Figure 1–1 below shows the parts of the Power Meter 710. Table 1–1 describes each part.

Figure 1–1: Parts of the Power Meter 710

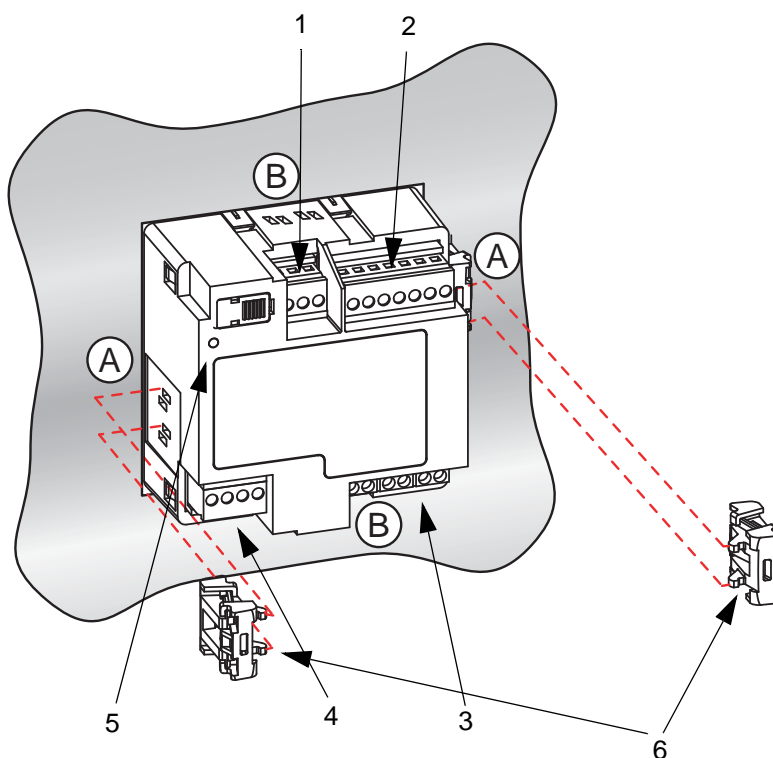


Table 1–1: Parts of the Power Meter

Number	Part	Description
1	Control power supply connector	Connection for control power to the power meter.
2	Voltage inputs	Voltage metering connections.
3	Current inputs	Current metering connections.
4	RS485 port (COM1)	The RS485 port is used for communications with a monitoring and control system. This port can be daisy-chained to multiple devices.
5	LED	Steady = OFF/ON. Flashing = communications indicator.
6	Retainer clips	Used to hold power meter in place.
A	Retainer slots, position A	Use for installation locations thinner than 3 mm (1/8 in.).
B	Retainer slots, position B	Use for installation locations 3 - 6 mm (1/8 to 1/4 in.).

Power Meter Parts and Accessories

Table 1–2: Power Meter Parts and Accessories

Description	Model Number
Power Meter with Integrated Display	PM710
	PM710MG

Box Contents

- One (1) power meter
- Two (2) retainer clips
- One (1) installation sheet
- One (1) RS485 Terminator (MCT2W)

FIRMWARE

This instruction bulletin is written to be used with firmware version 2.020. See “Viewing Meter Information” on page 13 for instructions on how to determine the firmware version.

SECTION 2— SAFETY PRECAUTIONS

BEFORE YOU BEGIN

This section contains important safety precautions that must be followed before attempting to install, service, or maintain electrical equipment. Carefully read and follow the safety precautions outlined below.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. In the USA, see NFPA 70E.
- Only qualified electrical workers should install this equipment. Such work should be performed only after reading this entire set of instructions.
- NEVER work alone.
- Before performing visual inspections, tests, or maintenance on this equipment, disconnect all sources of electric power. Assume that all circuits are live until they have been completely de-energized, tested, and tagged. Pay particular attention to the design of the power system. Consider all sources of power, including the possibility of backfeeding.
- Turn off all power supplying the power meter and the equipment in which it is installed before working on it.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Before closing all covers and doors, carefully inspect the work area for tools and objects that may have been left inside the equipment.
- Use caution while removing or installing panels so that they do not extend into the energized bus; avoid handling the panels, which could cause personal injury.
- The successful operation of this equipment depends upon proper handling, installation, and operation. Neglecting fundamental installation requirements may lead to personal injury as well as damage to electrical equipment or other property.
- NEVER bypass external fusing.
- NEVER short the secondary of a PT.
- NEVER open circuit a CT; use the shorting block to short circuit the leads of the CT before removing the connection from the power meter.
- Before performing Dielectric (Hi-Pot) or Megger testing on any equipment in which the power meter is installed, disconnect all input and output wires to the power meter. High voltage testing may damage electronic components contained in the power meter.
- The power meter should be installed in a suitable electrical enclosure.


Failure to follow this instruction will result in death or serious injury

SECTION 3— OPERATION

OPERATING THE DISPLAY

The power meter is equipped with a large, back-lit LCD display. It can display up to five lines of information plus a sixth row of menu options. Figure 3– 1 shows the different parts of the power meter display.

Figure 3– 1: Power Meter Display

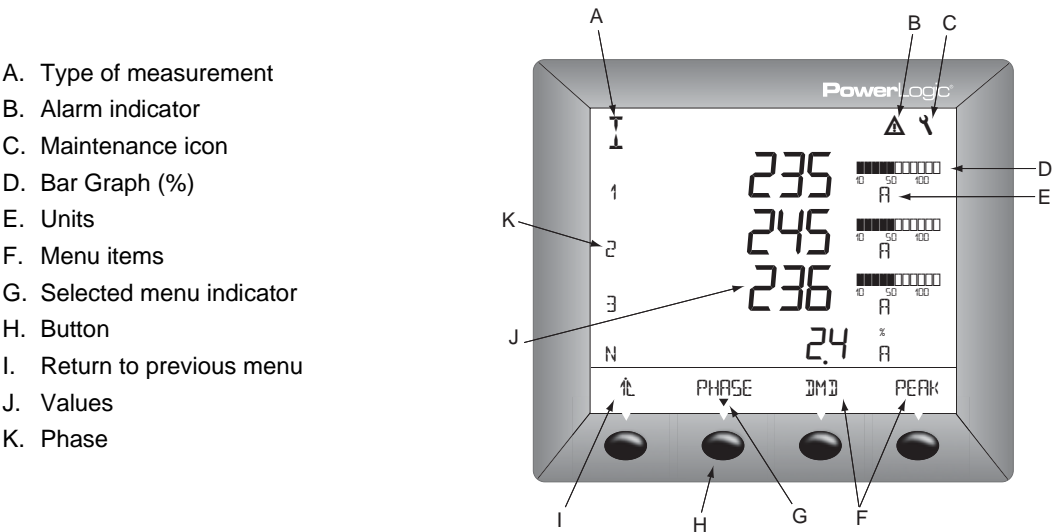

How the Buttons Work

The buttons are used to select menu items, display more menu items in a menu list, and return to previous menus. A menu item appears over one of the four buttons. Pressing a button selects the menu item and displays the menu item's screen. When you have reached the highest menu level, a black triangle appears beneath the selected menu item. To return to the previous menu level, press the button below . To cycle through the menu items in a menu list, press the button below . Table 3– 1 describes the button symbols.

Table 3– 1: Button Symbols

Navigation	
	View more menu items on the current level.
	Return to the previous menu level.
	Indicates the menu item is selected and there are no menu levels below the current level.
Change Values	
	Change values or scroll through the available options. When the end of a range is reached, pressing + again returns to the first value or option.
	Select the next position in a number.
	Move to the next editable field or exit the screen if the last editable field is selected.

NOTE:

- Each time you read “press” in this manual, press and release the appropriate button beneath a menu item. For example, if you are asked to “Press PHASE,” you would press and release the button below the PHASE menu item.
- Changes are automatically saved and take effect immediately.

Changing Values

When a value is selected, it flashes to indicate that it can be modified. A value is changed by doing the following:


- Press $\frac{1}{2}$ or \leftarrow to change numbers or scroll through available options.
- If you are entering more than one digit, press \leftarrow to move to the next digit in the number.
- To save your changes and move to the next field, press OK.

MENU OVERVIEW

Menu items are displayed below the horizontal line at the bottom of the screen. Figure 3– 2 below shows the menu items of the first two levels of the power meter menu hierarchy. Selecting a Level 1 menu item takes you to the next screen level containing the Level 2 menu items. Some Level 2 items have Level 3 items. The navigation buttons work consistently across all menu levels.

NOTE: The \leftarrow is used to scroll through all menu items on a level.

Figure 3– 2: Abbreviated IEC Mode/Menu Items*

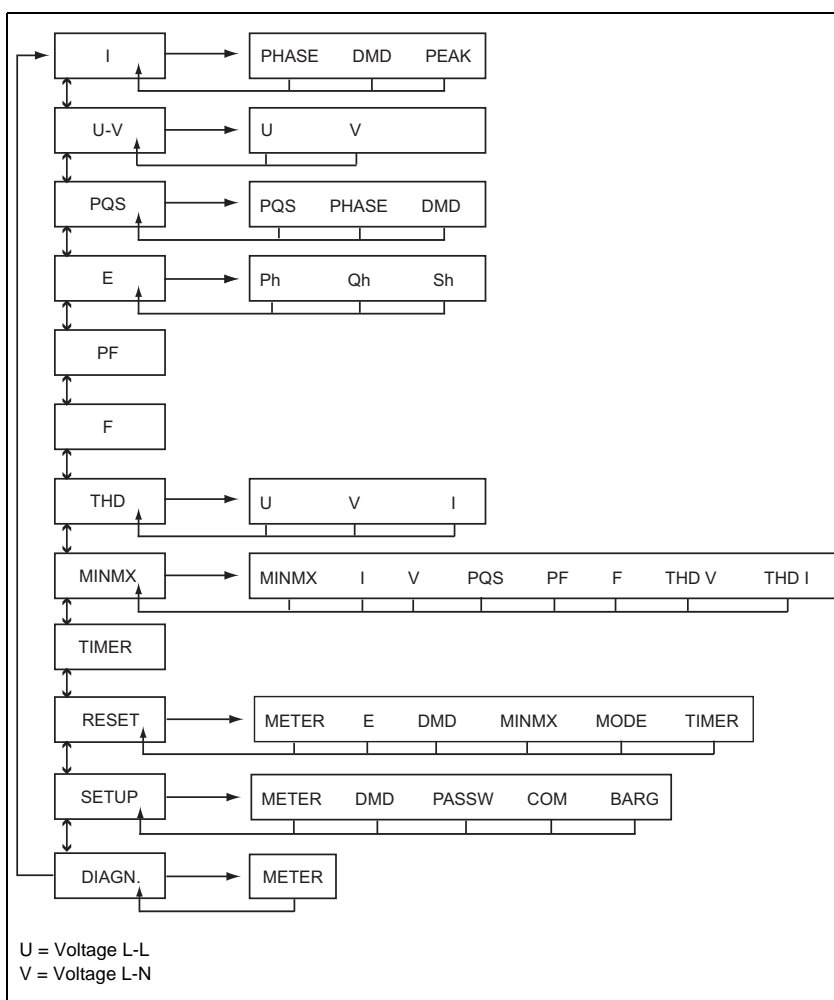

*The power meter can be configured to display either IEC or IEEE nomenclature. Figure 3– 2 shows IEC nomenclature.

NOTE: Reset and Setup menu items require a password to navigate to the second level menu.

SETTING UP THE POWER METER

The power meter ships with many default values already set up in the meter. These values may be changed by navigating to the appropriate screen and entering new values. Other values may be changed using the Reset function. Use the instructions in the following sections to change values. See “Resetting the Power Meter” on page 12 for more information on the Reset function.

NOTE: New values are automatically saved when you exit the screen.

The PM710 screen is able to display nomenclatures for both IEC and IEEE modes. Table 3– 2 shows the nomenclature for each mode. The different nomenclatures do not affect any of the meter calculations. See “Set Up Meter’s Visualization Mode” on page 11 for changing the meter mode.

Table 3– 2: PM710 Mode Nomenclatures

Measurement Symbols	IEC	IEEE
Phase labels	1, 2, 3	ABC
Voltage	U, V	VL-L, VL-N
Power	P, Q, S	W, VAR, VA
Energy	Ph, Qh, Sh	Wh, VARh, VAh
Power Factor	Total (no sign)	
Menu Selections	IEC	IEEE
Current	I	AMPS
Voltage	U - V	VOLTS
Power	PQS	PWR
Energy	E	ENERG
Power Factor	PF	PF
Frequency	F	HZ
Diagnostics	DIAGN	

NOTE:

- Power factor is an absolute reading. The power meter does not consider a sign for power factor.
- Real and Reactive Power and Energy are absolute or unsigned readings. The power meter adds energy and power as a positive regardless of the flow direction.

Set Up Power Meter

To begin power meter setup, do the following:

1. Scroll through the menu list at the bottom of the screen until you see SETUP.
2. Press SETUP.
3. Enter your password.


NOTE: The default password is 00000. See “Set Up Passwords” for information on how to change.

Follow the directions in the following sections to set up meter values.

NOTE: All screen displays show IEC nomenclature.


Set Up CTs

1. In SETUP mode, press \rightarrow until METER is visible.
2. Press METER.
3. Press CT.
4. Enter the PRIM (primary CT) number.
5. Press OK.
6. Enter the SEC. (secondary CT) number.
7. Press OK to return to the METER SETUP screen.
8. Press \uparrow to return to the SETUP screen.

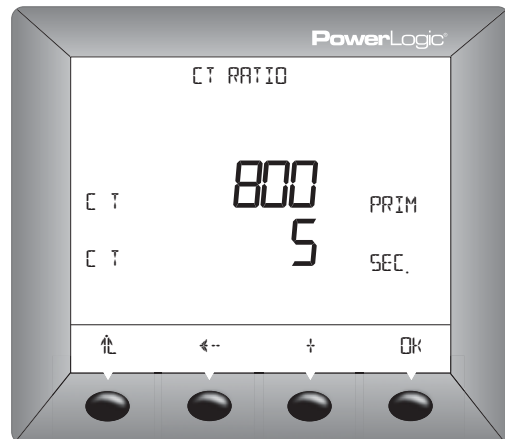


Set Up PTs

1. In SETUP mode, press \rightarrow until METER is visible.
2. Press METER.
3. Press PT.
4. Enter the SCALE value: x1, x10, x100, NO PT (for direct connect).
5. Press OK.
6. Enter the PRIM (primary) value.
7. Press OK.
8. Enter the SEC. (secondary) value.
9. Press OK to return to the METER SETUP screen.
10. Press \uparrow to return to the SETUP MODE screen.

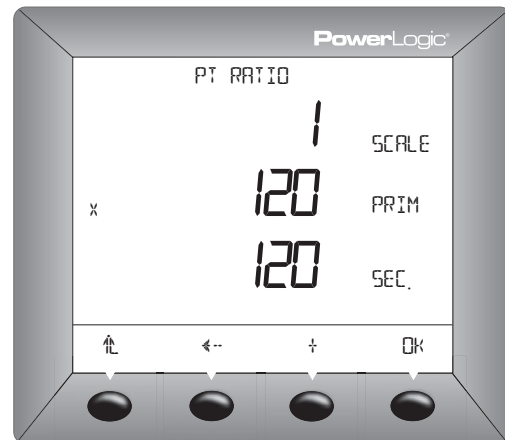


Set Up System Frequency

1. In SETUP mode, press \rightarrow until METER is visible.
2. Press \rightarrow until F (system frequency) is visible.
3. Press F.
4. Select the frequency.
5. Press OK to return to the METER SETUP screen.
6. Press \uparrow to return to the SETUP MODE screen.

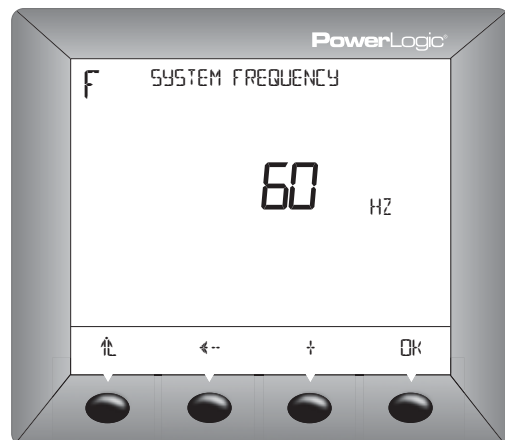

Set Up Meter System Type


1. In SETUP mode, press \rightarrow until METER is visible.
2. Press METER.
3. Press \rightarrow until SYS (system type) is visible.
4. Press SYS.
5. Select the SYS (system type): 10, 11, 12, 30, 31, 32, 40, 42, 44.
6. Press OK to return to the METER SETUP screen.
7. Press \uparrow to return to the SETUP MODE screen.

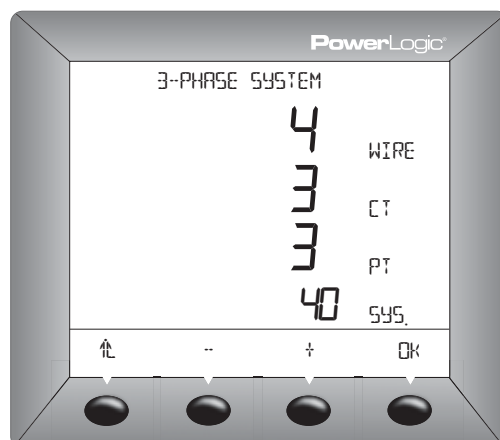

Set Up Demand Current


1. In SETUP mode, press \rightarrow until DMD (demand) is visible.
2. Press DMD (demand setup).
3. Press I (current).
4. Enter the MIN (demand interval in minutes) for I (current): 1 to 60.
5. Press OK.
6. Press \uparrow to return to the SETUP MODE screen.

NOTE: The calculation method used for current is Thermal.

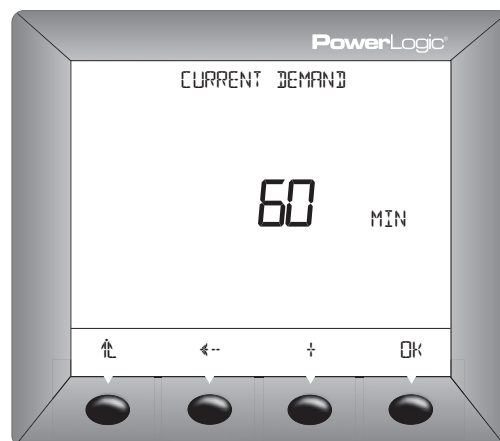

Setup PQS Demand

1. In SETUP mode, press \rightarrow until DMD (demand) is visible.
2. Press DMD (demand setup).
3. Press PQS (real, reactive, apparent power).
4. Enter the MIN (demand interval in minutes) for P (power): 1 to 60.
5. Press OK.
6. Enter the SUB-I (number of sub-intervals) for P: 0 to 60.
7. Press OK.
8. Press \uparrow to return to the SETUP MODE screen.

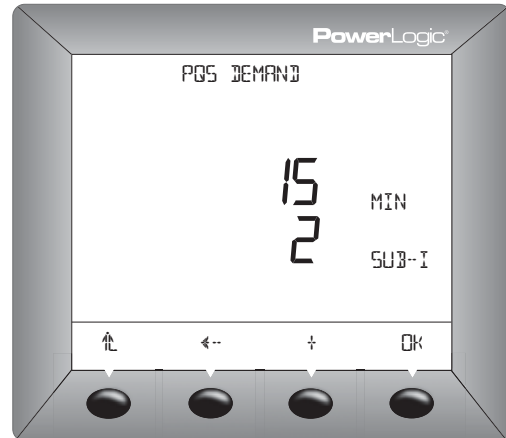


NOTE: The calculation method used for power is based on SUB-I as follows:

- 0 = sliding block
- 1 = block
- >1 = rolling block (The SUB-I value must divide evenly into the MIN value to the second. For example, you might set 2 subintervals for a 15-minute interval. The meter will calculate the subinterval period to be 7.5 minutes or 450 seconds. Demand is updated at each subinterval.

Set Up Passwords


1. In SETUP mode, press \rightarrow until PASSW (password) is visible.
2. Press PASSW.
3. Enter the SETUP password.
4. Press OK.
5. Enter the RESET (password to reset the power meter) password.
6. Press OK to return to the SETUP MODE screen.

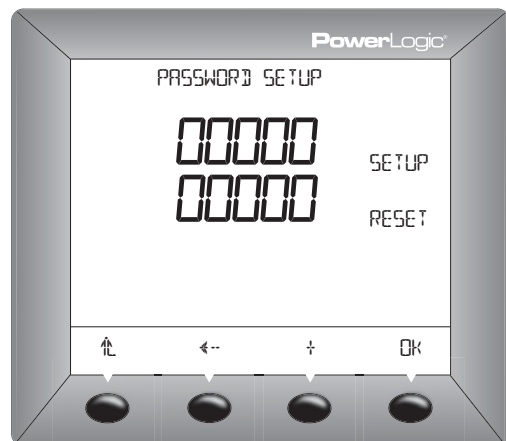

Set Up Communications


1. In SETUP mode, press \rightarrow until COM is visible.
2. Press COM.
3. Enter the ADDR (meter address): 1 to 247.
4. Press OK.
5. Select the BAUD (baud rate): 2400, 4800, 9600, or 19200.
6. Press OK.
7. Select the parity: EVEN, ODD, or NONE.
8. Press OK to return to the SETUP MODE screen.

NOTE: Default values are displayed.

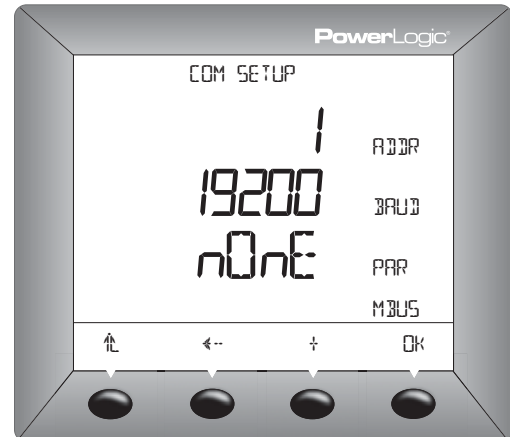

Set Up Bar Graph Scale


1. In SETUP mode, press \rightarrow until BARG is visible.
2. Press BARG.
3. Enter the %CT (percent of CT primary to represent 100 on the bar graph).
4. Press OK to return to the SETUP MODE screen.

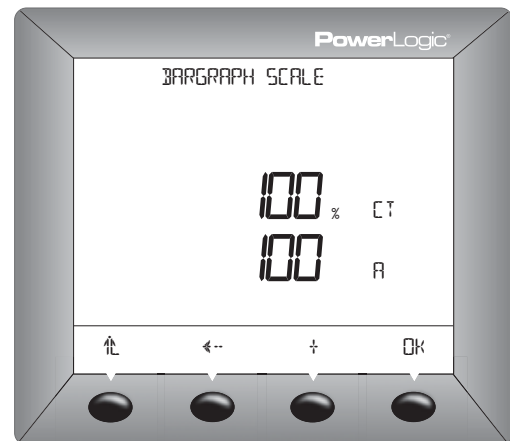

Set Up Meter's Visualization Mode

The meter's Visualization Mode is set up using the RESET menu. Follow the "Power Meter Setup" instructions but select RESET instead of SETUP. The meter mode is only a visualization mode. It does not change or affect the way the PM710 performs its calculations.

1. In RESET mode, press \rightarrow until MODE is visible.
2. Press MODE.
3. Select IEEE or IEC by pressing the corresponding button below the selection. A small triangle is displayed below the current selection.
4. Press \uparrow to return to the RESET MODE screen.

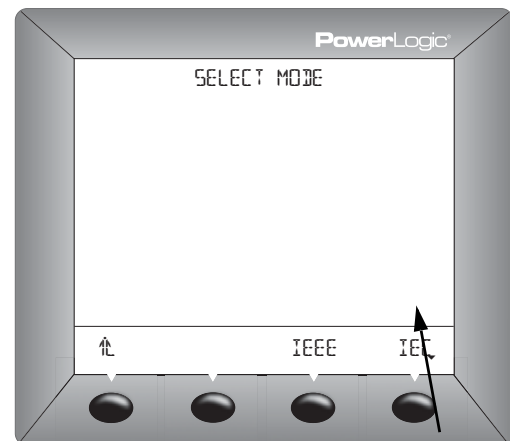

Selected Small Triangle

RESETTING THE POWER METER

Meter values can be re-initialized using the Reset function.


The following values are affected by this Reset:

- Operation Timer
- Energy Accumulators
- Min/Max Values
- Demand Values

Initialize the Meter

To re-initialize the power meter, complete the following steps:

1. From the SUMMARY screen, press RESET.
2. Enter the RESET password (00000 is the default).
3. Press OK.
4. Press METER.
5. Press NO or YES.
6. Press \uparrow to return to the RESET screen.

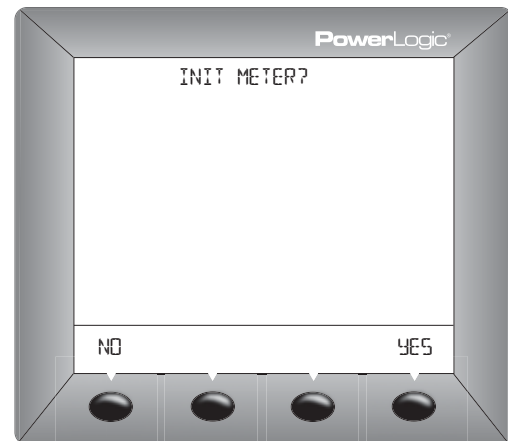


Reset Individual Values

Individual values for Energy, Demand, Min/Max, and Timer can be reset without affecting other values. Below are instructions for resetting Energy values.



Reset Energy Values


1. From the SUMMARY screen, press RESET.
2. Enter the RESET password (00000 is the default).
3. Press OK.
4. Press E.
5. Press NO or YES.
6. Press \uparrow to return to the RESET screen.

NOTE: Individual settings for Demand, Min/Max, Mode, and Timer can be reset by selecting the value and using the above procedure.

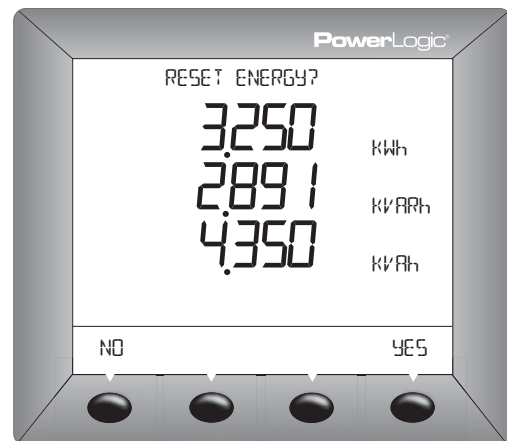

VIEWING METER INFORMATION

1. Press  until DIAGN (diagnostics) is visible.
2. Press METER.
3. View the meter information (model number, operating system firmware version, reset system firmware version, and power meter serial number).
4. Press  to return to the MAIN screen.

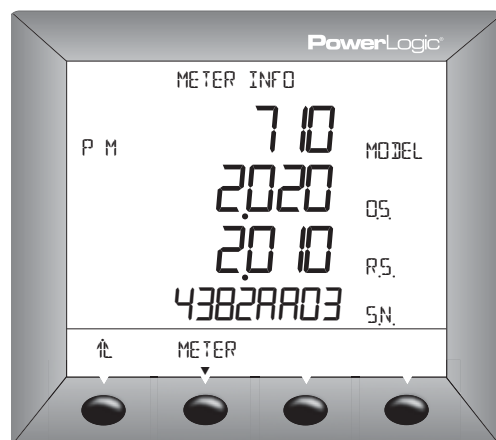

SECTION 4— METERING

POWER METER CHARACTERISTICS

The power meter measures currents and voltages and reports in real time the rms values for all three phases and neutral. In addition, the power meter calculates power factor, real power, reactive power, and more. Table 4 lists the main or most important metering characteristics of the power meter.

Table 4— 1: Power Meter Characteristics

Instantaneous rms Values	
Current	Per phase, neutral, average of 3 phases
Voltage	Average of 3 phases, L-L and L-N
Frequency	45 to 65 Hz
Active power	Total and per phase (absolute)*
Reactive power	Total and per phase (absolute)*
Apparent power	Total and per phase
Power factor	Total (absolute) 0.000 to 1
Energy Values	
Active energy (total)	0 to 1.84×10^{18} Wh (absolute)*
Reactive energy (total)	0 to 1.84×10^{18} VARh (absolute)*
Apparent energy (total)	0 to 1.84×10^{18} VAh
Operating time	Up to 32,767 hours and 59 minutes
Demand Values	
Current	Per phase (Thermal)
Active, reactive, apparent power	Total (sliding block, rolling block, or block)
Maximum Demand Values	
Maximum current	Phase
Maximum active power	Total
Maximum reactive power	Total
Maximum apparent power	Total
Power-quality Values	
Total harmonic distortion (THD)	Current and voltage (L-L and L-N)
Reset (password protected)	
Maximum demand current and power	
Energy values and operating time	
Minimum and maximum values	
Operational time	
Visualization Modes (password protected)	
IEC and IEEE	Display (All calculations are the same under both visualization modes.)
Minimum and Maximum Values (unsigned)	
Total real power (absolute)*	
Total apparent power	
Total reactive power (absolute)*	
Total power factor (absolute)*	
Current per phase	
Voltage (L-L and L-N)	
THD current per phase	
THD voltage (L-L and L-N)	

*Absolute values—Both power and energy in and out of the load are treated as additive.

Table 4– 1: Power Meter Characteristics *(continued)*

Local or Remote Setup	
Type of distribution system	3-phase 3- or 4-wire with 1, 2, or 3 CTs, two- or single-phase
Rating of current transformers	Primary 1 to 32,767 A Secondary 5 or 1 A
Voltage	Primary 3,276,700 V max Secondary 100, 110, 115, 120
Calculation interval for demand currents	1 to 60 minutes
Calculation interval for demand power	1 to 60 minutes

MODBUS RS485

Functions	
RS485	2-wire
Communication protocol	MODBUS RTU
Settings	
Communication address	1 to 247
Baud rate (communication speed)	2400, 4800, 9600, 19200 bauds
Parity	none, even, odd

MIN/MAX VALUES FOR REAL-TIME READINGS

When certain readings reach their highest or lowest value, the Power Meter saves the values in its nonvolatile memory. These values are called the minimum and maximum (min/max) values. The min/max values stored since the last min/max reset can be viewed using the Power Meter display. See Table 4– 1 for a list of the minimum and maximum values stored in the PM710. The min/max value for power factor is based on the unsigned or absolute value of power factor.

POWER FACTOR MIN/MAX CONVENTIONS

The min/max value for power factor is based on the unsigned or absolute value of power factor.

DEMAND READINGS

The power meter provides a variety of demand readings. Table 4– 2 lists the available demand readings and their reportable ranges.

Table 4– 2: Demand Readings

Demand Readings	Reportable Range
Demand Current, Per-Phase	
Last Complete Interval	0 to 32,767 A
Peak	0 to 32,767 A
Demand Real Power, 3Ø Total	
Last Complete Interval	0 to 3276.70 MW
Peak	0 to 3276.70 MW

Table 4– 2: Demand Readings (continued)

Demand Reactive Power, 3Ø Total	
Last Complete Interval	0 to 3276.70 MVAR
Peak	0 to 3276.70 MVAR
Demand Apparent Power, 3Ø Total	
Last Complete Interval	0 to 3276.70 MVA
Peak	0 to 3276.70 MVA

Demand Power Calculation Methods

Demand power is accumulated power during a specified period divided by the length of that period. How the power meter performs this calculation depends on the method you select. To be compatible with electric utility billing practices, the power meter provides block interval demand. The default demand calculation is set to rolling block with a 5-minute intervals and 5 subintervals.


Block Interval Demand

In the block interval demand method, you select a “block” of time that the power meter uses for the demand calculation. You choose how the power meter handles that block of time (interval). Three different modes are possible:

- **Sliding Block.** In the sliding block interval, you select an interval from 1 to 60 minutes (in 1-minute increments). Selection for subinterval is not required, but configuration software automatically sets a subinterval. If the interval is ≤15 minutes, the subinterval is 15 seconds. If the interval is >15 minutes, the subinterval is 60 seconds. The power meter displays the demand value for the last completed interval.
- **Fixed Block.** In the fixed block interval, you select an interval from 1 to 60 minutes (in 1-minute increments). For the demand to be calculated as a fixed block, the subinterval value has to be set to 1. The power meter calculates and updates the demand at the end of each interval.
- **Rolling Block.** In the rolling block interval, you select an interval and a subinterval. The subinterval must divide evenly into the interval to the second. The value here has to be >1. For example, you might set 2 subintervals for a 15-minute interval. The meter will calculate the subinterval period to be 7.5 minutes or 450 seconds. Demand is *updated at each subinterval*. The power meter displays the demand value for the last completed interval.

Figure 4– 1 illustrates the three ways to calculate demand power using the block method. For illustration purposes, the interval is set to 15 minutes.

Figure 4– 1: Block Interval Demand Examples

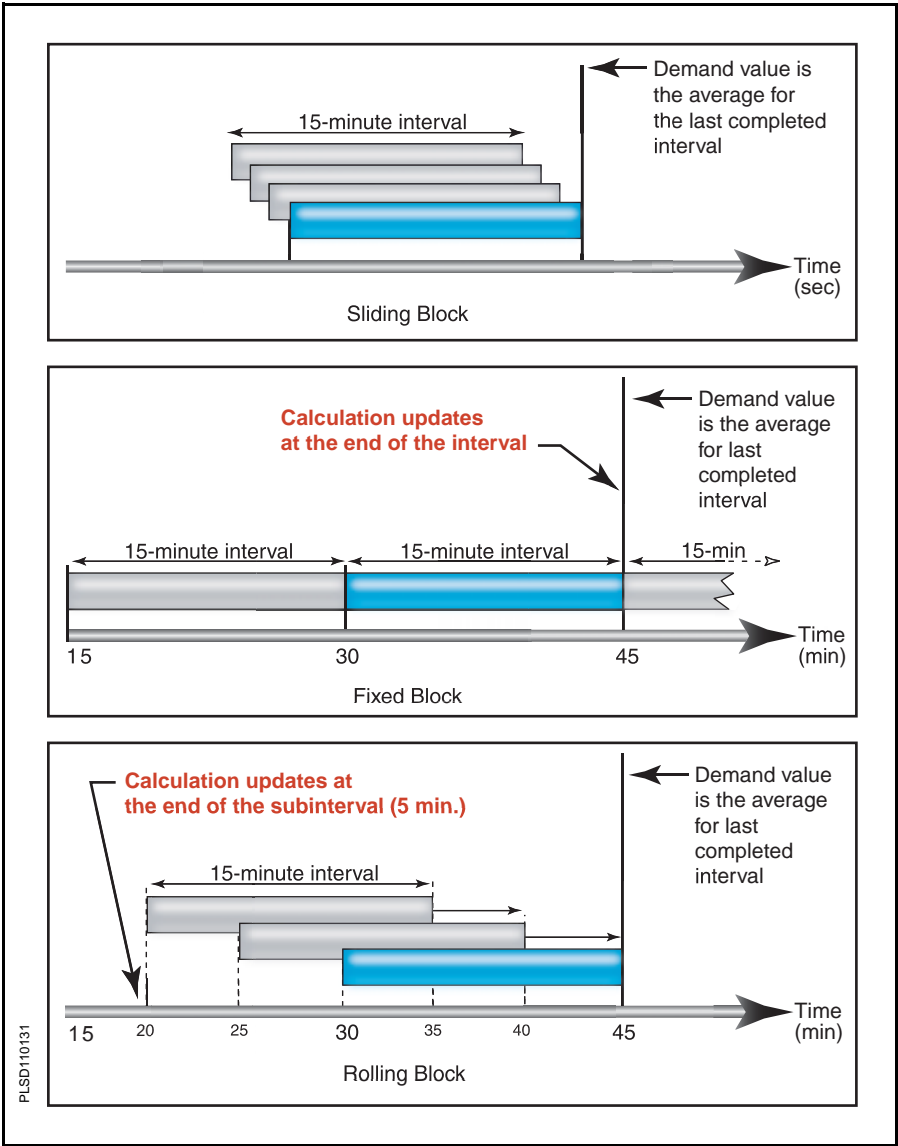

Peak Demand

In nonvolatile memory, the power meter maintains a running maximum for power and current demand values, called “peak demand.” The peak is the highest average for each of these readings: per phase current demand, kWd, kVARD, and kVAD since the last reset. Table 4– 2 on page 16 lists the available peak demand readings from the power meter.

You can reset peak demand values from the power meter display. From the Main Menu, select MAINT > RESET > DMD.

You should reset peak demand after changes to basic meter setup, such as CT ratio or system type.


Demand Current Calculation Methods

Thermal Demand

The power meter calculates demand current using the thermal demand method. The default interval is 15 minutes, but you can set the demand current interval between 1 and 60 minutes in 1-minute increments.

The thermal demand method calculates the demand based on a thermal response, which mimics thermal demand meters. The demand calculation updates at the end of each interval. You select the demand interval from 1 to 60 minutes (in 1-minute increments). In Figure 4– 2 the interval is set to 15 minutes for illustration purposes.

Figure 4– 2: Thermal Demand Example

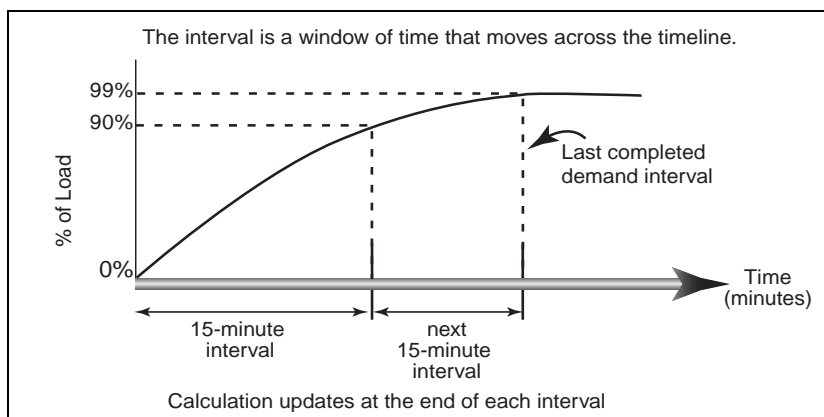

ENERGY READINGS

The power meter calculates and stores accumulated energy values for real, reactive, and apparent energy.

You can view accumulated energy from the display. The resolution of the energy value will automatically change through the range of 000.000 kWh to 000,000 MWh (000.000 kVAh to 000,000 MVARh).

Energy values can be reported over communications in two formats: scaled long integer and floating point. The units are always kWh, KVARh, or kVAh. The long integer values are limited to 2,147,483,647 x the scale factor. The floating point values are limited to 1.84×10^{18} .

POWER ANALYSIS VALUES

The power meter provides power analysis values for Total Harmonic Distortion (THD). THD is a quick measure of the total distortion present in a waveform and is the ratio of harmonic content to the fundamental. It provides a general indication of the “quality” of a waveform. THD is calculated for both voltage and current. The power meter uses the following equation to calculate THD where H is the harmonic distortion:

$$\text{THD} = \left\{ \sqrt{\frac{(\text{RMS})^2 - H_1^2}{H_1^2}} \right\} \times 100$$

SECTION 5— MAINTENANCE AND TROUBLESHOOTING

INTRODUCTION

The power meter does not contain any user-serviceable parts. If the power meter requires service, contact your local sales representative. Do not open the power meter. Opening the power meter voids the warranty.

Get Technical Support

Please refer to the *Technical Support Contacts* provided in the power meter shipping carton for a list of support phone numbers by country or go to www.powerlogic.com, select your country > tech support for phone numbers by country.

Troubleshooting

The information in Table 5– 1 describes potential problems and their possible causes. It also describes checks you can perform or possible solutions for each. After referring to this table, if you cannot resolve the problem, contact the your local Square D/Schneider Electric sales representative for assistance.

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E.
- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Carefully inspect the work area for tools and objects that may have been left inside the equipment.
- Use caution while removing or installing panels so that they do not extend into the energized bus; avoid handling the panels, which could cause personal injury.

Failure to follow this instruction will result in death or serious injury

Table 5– 1: Troubleshooting

Potential Problem	Possible Cause	Possible Solution
The maintenance icon is illuminated on the power meter display.	When the maintenance icon is illuminated, it indicates the metered signals have reached saturation point or the frequency is out of range. For further detail refer to Register 4112.	<ul style="list-style-type: none"> • Verify voltage and current inputs range. The Voltage input metering range is 10-480 L-L VAC (direct) or 10-277 L-N VAC (direct) or up to 1.6 MV (with external VT). The Current input metering range is: 5 mA - 6 A. In addition, verify that the current and voltage inputs are free of noise. • Call Technical Support or contact your local sales representative for assistance.
The display is blank after applying control power to the power meter.	The power meter may not be receiving the necessary power.	<ul style="list-style-type: none"> • Verify that the power meter line (L) and neutral (N) terminals are receiving the necessary power. • Verify that the heartbeat LED is blinking. • Check the fuse.

Table 5– 1: Troubleshooting *(continued)*

The data being displayed is inaccurate or not what you expect.	Incorrect setup values.	Check that the correct values have been entered for power meter setup parameters (CT and PT ratings, System Type, Nominal Frequency, and so on).
	Incorrect voltage inputs.	Check power meter voltage input terminals to verify that adequate voltage is present.
	Power meter is wired improperly. See Appendix C—Instrument Transformer Wiring: Troubleshooting Guide on page 37 for more information on troubleshooting wiring problems.	Check that all CTs and PTs are connected correctly (proper polarity is observed) and that they are energized. Check shorting terminals.
Cannot communicate with power meter from a remote personal computer.	Power meter address is incorrect.	Check to see that the power meter is correctly addressed.
	Power meter baud rate (parity, stop bit) is incorrect.	Verify that the baud rate of the power meter matches the baud rate of all other devices on its communications link.
	Communications lines are improperly connected.	Verify the power meter communications connections.
	Communications lines are improperly terminated.	Check to see that a multipoint communications terminator is properly installed.

APPENDIX A—SPECIFICATIONS

POWER METER SPECIFICATIONS

Table A– 1: Specifications

Electrical Characteristics		
Type of measurement		True rms up to the 15th harmonic on three-phase AC system (3P, 3P + N) 32 samples per cycle
Measurement Accuracy	Current	±0.5% from 1A to 6A
	Voltage	±0.5% from 50 V to 277 V
	Power Factor	±0.0031 from 1A to 6A and from -0.50 to + 0.5 PF
	Power	±1.0%
	Frequency	±0.02 Hz from 45 to 65 Hz
	Real Energy	IEC 62053-21 Class 1.0; ANSI C12.16 Accuracy Class 1
	Reactive Energy	IEC 62053-23 Class 2
Data update rate		1 s
Input-voltage	Measured voltage	10 to 480 V AC (direct L-L) 10 to 277 V AC (direct L-N) Up to 1.6 MV AC (with external VT). The starting of the measuring voltage depends on the PT ratio.
	Metering over-range	1.2 Un
	Impedance	2 MΩ (L-L) / 1 MΩ (L-N)
	Frequency range	45 to 65 Hz
Input-current	CT ratings	Primary Adjustable from 1 A to 32767 A
		Secondary 5 A or 1 A
	Measurement input range	10 mA to 6 A
	Permissible overload	15 A continuous
		50 A for 10 seconds per hour 120 A for 1 second per hour
	Impedance	< 0.12 Ω
Control Power	Load	< 0.15 VA
	AC	100 to 415 ±10% V AC, 5 VA; 50 to 60 Hz
	DC	125 to 250 ±20% V DC, 3W
Ride-through time		100 ms at 120 V AC
Mechanical Characteristics		
Weight		0.37 kg
IP degree of protection (IEC 60529)		Designed to IP52 front display, IP30 meter body
Dimensions		96 x 96 x 69 mm (meter with display)
		96 x 96 x 50 mm (behind mounting surface)
Environmental Characteristics		
Operating temperature	Meter	-5 °C to +60 °C
	Display	-10 °C to +55 °C
Storage temperature	Meter + display	-40 °C to +85 °C
Humidity rating		5 to 95% RH at 50 °C (non-condensing)
Pollution degree		2
Metering category (voltage inputs and control power)		CAT III, for distribution systems up to 277 V L-N / 480 V AC L-L
Dielectric withstand		As per IEC61010, UL508 Double insulated front panel display
Altitude		3000 m

Table A– 1: Specifications *(continued)*

Electromagnetic Compatibility	
Electrostatic discharge	Level III (IEC 61000-4-2)
Immunity to radiated fields	Level III (IEC 61000-4-3)
Immunity to fast transients	Level III (IEC 61000-4-4)
Immunity to impulse waves	Level III (IEC 61000-4-5)
Conducted immunity	Level III (IEC 61000-4-6)
Immunity to magnetic fields	Level III (IEC 61000-4-8)
Immunity to voltage dips	Level III (IEC 61000-4-11)
Conducted and radiated emissions	CE commercial environment/FCC part 15 class B EN55011
Harmonics	IEC 61000-3-2
Flicker emissions	IEC 61000-3-3
Safety	
Europe	CE, as per IEC 61010-1
U.S. and Canada	UL508
Communications	
RS485 port	2-wire, 2400, 4800, 9600, or 19200 baud; Parity— Even, Odd, None; 1 stop bit; Modbus RTU
Display Characteristics	
Dimensions 73 x 69 mm	Back-lit green LCD (6 lines total, 4 concurrent values)

APPENDIX B—REGISTER LIST

REGISTER LIST

Table B– 1: Register Listing—Setup and Status

Setup & Status									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
1204	Usage Hours	2	Float	RO	Y	-	Hours	≥ 0.0	This combination timer counts the total time for which the absolute current on at least one phase is $> 0.1\text{Amp}$.
1206	Usage Minutes	2	Float	RO	Y	-	Minutes	0.0-59.0	This combination timer counts the total time for which the absolute current on at least one phase is $> 0.1\text{Amp}$.
4105	Scale Factor I (current)	1	Integer	RO	N	-	-	-	Power of 10
4106	Scale Factor V (voltage)	1	Integer	RO	N	-	-	-	Power of 10
4107	Scale Factor W (power)	1	Integer	RO	N	-	-	-	Power of 10
4108	Scale Factor E (energy)	1	Integer	RO	N	-	-	-	Power of 10
4110	Usage Hours	1	Integer	RO	Y	-	Hours	0-32767	
4111	Usage Minutes	1	Integer	RO	Y	-	Minutes	0-59	
4112	Error Bitmap	1	Integer	RO	N	-	-	-	Wrench Icon Control bit0: VA Saturation bit1: VB Saturation bit2: VC Saturation bit3: IA Saturation bit4: IB Saturation bit5: IC Saturation bit6: Freq Invalid bit7-bit15: Reserved
4117	Thermal Demand Interval	1	Integer	R/W	Y	-	Minutes	1-60	Current Demand Only
4118	Power Block Demand Interval	1	Integer	R/W	Y	-	Minutes	1-60	Duration in minutes
4119	Power Block Demand Number of Sub-Intervals	1	Integer	R/W	Y	-	Seconds	1-60	0: Sliding Block Calculation If Reg[4118] ≤ 15 Minutes the Sub-interval is 15 Seconds if Reg[4118] > 15 Minutes the Sub-interval is 60 Seconds 1: Fixed Block else: Rolling Block
4120	CT Ratio - Primary	1	Integer	R/W	Y	-	-	1-32767	
4121	CT Ratio - Secondary	1	Integer	R/W	Y	-	-	1 or 5	
4122	PT Ratio - Primary	1	Integer	R/W	Y	-	-	1-32767	
4123	PT Ratio - Scale (0 = No PT)	1	Integer	R/W	Y	-	-	0, 1, 10, 100	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B– 1: Register Listing—Setup and Status *(continued)*

Setup & Status									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
4124	PT Ratio - Secondary	1	Integer	R/W	Y	-	-	100, 110, 115, 120	
4125	Service Frequency	1	Integer	R/W	Y	-	Hz	50 or 60	
4126	Reset Commands	1	Integer	R/W	N	-	-	N/A	Always return a 0. A list of commands is shown in Table B– 5.
4127	System Type	1	Integer	R/W	Y	-	-	10,11,12,30,31, 32,40,42,44	
4128	Display Mode	1	Integer	R/W	Y	-	-	0,1	0 = IEC Units 1 = IEEE Units
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

The PM710 includes registers in two different formats: integer and floating point. For example, Real Power A is included in Register 1066 and 1067 (floating point) and register 4036 (integer).

Table B– 2: Register Listing—Metered Data

Metered Data									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
1000	Real Energy, Total	2	Float	RO	Y	-	kWh	-	Absolute
1002	Apparent Energy, Total	2	Float	RO	Y	-	kVAh	-	
1004	Reactive Energy, Total	2	Float	RO	Y	-	kVARh	-	Absolute
1006	Real Power, Total	2	Float	RO	N	-	kW	-	Absolute
1008	Apparent Power, Total	2	Float	RO	N	-	kVA	-	
1010	Reactive Power, Total	2	Float	RO	N	-	kVAR	-	Absolute
1012	Power Factor, Total	2	Float	RO	N	-	-	0.0 - 1.0	Absolute
1014	Voltage, L-L, 3P Average	2	Float	RO	N	-	Volt	-	
1016	Voltage, L-N, 3P Average	2	Float	RO	N	-	Volt	-	
1018	Current, 3P Average	2	Float	RO	N	-	Amp	-	
1020	Frequency	2	Float	RO	N	-	Hz	45.0 - 65.0	
1034	Current, A	2	Float	RO	N	-	Amp	-	
1036	Current, B	2	Float	RO	N	-	Amp	-	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B– 2: Register Listing—Metered Data (continued)

Metered Data									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
1038	Current, C	2	Float	RO	N	-	Amp	-	
1040	Current, N	2	Float	RO	N	-	Amp	-	
1054	Voltage, A-B	2	Float	RO	N	-	Volt	-	
1056	Voltage, B-C	2	Float	RO	N	-	Volt	-	
1058	Voltage, C-A	2	Float	RO	N	-	Volt	-	
1060	Voltage, A-N	2	Float	RO	N	-	Volt	-	
1062	Voltage, B-N	2	Float	RO	N	-	Volt	-	
1064	Voltage, C-N	2	Float	RO	N	-	Volt	-	
1066	Real Power, A	2	Float	RO	N	-	kW	-	Absolute
1068	Real Power, B	2	Float	RO	N	-	kW	-	Absolute
1070	Real Power, C	2	Float	RO	N	-	kW	-	Absolute
1072	Apparent Power, A	2	Float	RO	N	-	kVA	-	
1074	Apparent Power, B	2	Float	RO	N	-	kVA	-	
1076	Apparent Power, C	2	Float	RO	N	-	kVA	-	
1078	Reactive Power, A	2	Float	RO	N	-	kVAR	-	Absolute
1080	Reactive Power, B	2	Float	RO	N	-	kVAR	-	Absolute
1082	Reactive Power, C	2	Float	RO	N	-	kVAR	-	Absolute
1084	Current, A, THD	2	Float	RO	N	-	%	0.0-1000.0	
1086	Current, B, THD	2	Float	RO	N	-	%	0.0-1000.0	
1088	Current, C, THD	2	Float	RO	N	-	%	0.0-1000.0	
1092	Voltage, A-N, THD	2	Float	RO	N	-	%	0.0-1000.0	
1094	Voltage, B-N, THD	2	Float	RO	N	-	%	0.0-1000.0	
1096	Voltage, C-N, THD	2	Float	RO	N	-	%	0.0-1000.0	
1098	Voltage, A-B, THD	2	Float	RO	N	-	%	0.0-1000.0	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B– 2: Register Listing—Metered Data (continued)

Metered Data									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
1100	Voltage, B-C, THD	2	Float	RO	N	-	%	0.0-1000.0	
1102	Voltage, C-A, THD	2	Float	RO	N	-	%	0.0-1000.0	
4000	Real Energy, Total	2	Long	RO	Y	E	kWh/Scale	0-0xFFFFFFFF	Absolute
4002	Apparent Energy, Total	2	Long	RO	Y	E	kVAh/Scale	0-0xFFFFFFFF	
4004	Reactive Energy, Total	2	Long	RO	Y	E	kVARh/Scale	0-0xFFFFFFFF	Absolute
4006	Real Power, Total	1	Integer	RO	N	W	kW/Scale	0-32767	Absolute
4007	Apparent Power, Total	1	Integer	RO	N	W	kVA/Scale	0-32767	
4008	Reactive Power, Total	1	Integer	RO	N	W	kVAR/Scale	0-32767	Absolute
4009	Power Factor, Total	1	Integer	RO	N	0.0001	-	0-1	Absolute
4010	Voltage, L-L, 3P Average	1	Integer	RO	N	V	Volt/Scale	0-32767	
4011	Voltage, L-N, 3P Average	1	Integer	RO	N	V	Volt/Scale	0-32767	
4012	Current, 3P Average	1	Integer	RO	N	I	Amp/Scale	0-32767	
4013	Frequency	1	Integer	RO	N	0.01	Hz	4500-6500	
4020	Current, A	1	Integer	RO	N	I	Amp/Scale	0-32767	
4021	Current, B	1	Integer	RO	N	I	Amp/Scale	0-32767	
4022	Current, C	1	Integer	RO	N	I	Amp/Scale	0-32767	
4023	Current, N	1	Integer	RO	N	I	Amp/Scale	0-32767	
4030	Voltage, A-B	1	Integer	RO	N	V	Volt/Scale	0-32767	
4031	Voltage, B-C	1	Integer	RO	N	V	Volt/Scale	0-32767	
4032	Voltage, C-A	1	Integer	RO	N	V	Volt/Scale	0-32767	
4033	Voltage, A-N	1	Integer	RO	N	V	Volt/Scale	0-32767	
4034	Voltage, B-N	1	Integer	RO	N	V	Volt/Scale	0-32767	
4035	Voltage, C-N	1	Integer	RO	N	V	Volt/Scale	0-32767	
4036	Real Power, A	1	Integer	RO	N	W	kW/Scale	0-32767	Absolute
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B– 2: Register Listing—Metered Data *(continued)*

Metered Data									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
4037	Real Power, B	1	Integer	RO	N	W	kW/Scale	0-32767	Absolute
4038	Real Power, C	1	Integer	RO	N	W	kW/Scale	0-32767	Absolute
4039	Apparent Power, A	1	Integer	RO	N	W	kVA/Scale	0-32767	
4040	Apparent Power, B	1	Integer	RO	N	W	kVA/Scale	0-32767	
4041	Apparent Power, C	1	Integer	RO	N	W	kVA/Scale	0-32767	
4042	Reactive Power, A	1	Integer	RO	N	W	kVAR/Scale	0-32767	Absolute
4043	Reactive Power, B	1	Integer	RO	N	W	kVAR/Scale	0-32767	Absolute
4044	Reactive Power, C	1	Integer	RO	N	W	kVAR/Scale	0-32767	Absolute
4045	Current, A, THD	1	Integer	RO	N	0.1	%	0-10000	
4046	Current, B, THD	1	Integer	RO	N	0.1	%	0-10000	
4047	Current, C, THD	1	Integer	RO	N	0.1	%	0-10000	
4049	Voltage, A-N, THD	1	Integer	RO	N	0.1	%	0-10000	
4050	Voltage, B-N, THD	1	Integer	RO	N	0.1	%	0-10000	
4051	Voltage, C-N, THD	1	Integer	RO	N	0.1	%	0-10000	
4052	Voltage, A-B, THD	1	Integer	RO	N	0.1	%	0-10000	
4053	Voltage, B-C, THD	1	Integer	RO	N	0.1	%	0-10000	
4054	Voltage, C-A, THD	1	Integer	RO	N	0.1	%	0-10000	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B– 3: Register Listing—Demand Values

Demand Values									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
1022	Real Power, Total Demand Present	2	Float	RO	N	-	kW	-	Absolute
1024	Apparent Power, Total Demand Present	2	Float	RO	N	-	kVA	-	
1026	Reactive Power, Total Demand Present	2	Float	RO	N	-	kVAR	-	Absolute
1028	Real Power, Total Demand Peak	2	Float	RO	Y	-	kW	-	Absolute
1030	Apparent Power, Total Demand Peak	2	Float	RO	Y	-	kVA	-	
1032	Reactive Power, Total Demand Peak	2	Float	RO	Y	-	kVAR	-	Absolute
1042	Current, A, Demand Present	2	Float	RO	N	-	Amp	-	
1044	Current, B, Demand Present	2	Float	RO	N	-	Amp	-	
1046	Current, C, Demand Present	2	Float	RO	N	-	Amp	-	
1048	Current, A, Demand Peak	2	Float	RO	Y	-	Amp	-	
1050	Current, B, Demand Peak	2	Float	RO	Y	-	Amp	-	
1052	Current, C, Demand Peak	2	Float	RO	Y	-	Amp	-	
4014	Real Power, Total Demand Present	1	Integer	RO	N	W	kW/Scale	0-32767	Absolute
4015	Apparent Power, Total Demand Present	1	Integer	RO	N	W	kVA/Scale	0-32767	
4016	Reactive Power, Total Demand Present	1	Integer	RO	N	W	kVAR/Scale	0-32767	Absolute
4017	Real Power, Total Demand Peak	1	Integer	RO	Y	W	kW/Scale	0-32767	Absolute
4018	Apparent Power, Total Demand Peak	1	Integer	RO	Y	W	kVA/Scale	0-32767	
4019	Reactive Power, Total Demand Peak	1	Integer	RO	Y	W	kVAR/Scale	0-32767	Absolute
4024	Current, A, Demand Present	1	Integer	RO	N	I	Amp/Scale	0-32767	
4025	Current, B, Demand Present	1	Integer	RO	N	I	Amp/Scale	0-32767	
4026	Current, C, Demand Present	1	Integer	RO	N	I	Amp/Scale	0-32767	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B- 3: Register Listing—Demand Values *(continued)*

Demand Values									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
4027	Current, A, Demand Peak	1	Integer	RO	Y	I	Amp/Scale	0-32767	
4028	Current, B, Demand Peak	1	Integer	RO	Y	I	Amp/Scale	0-32767	
4029	Current, C, Demand Peak	1	Integer	RO	Y	I	Amp/Scale	0-32767	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B- 4: Register Listing—Min Max Values

Min Max values									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
1104	Real Power, Total Minimum	2	Float	RO	Y	-	kW	-	Absolute
1106	Apparent Power, Total Minimum	2	Float	RO	Y	-	kVA	-	
1108	Reactive Power, Total Minimum	2	Float	RO	Y	-	kVAR	-	Absolute
1110	Power Factor, Total Minimum	2	Float	RO	Y	-	-	0.0-1.0	Absolute
1112	Frequency Minimum	2	Float	RO	Y	-	Hz	45.0-65.0	
1114	Current, A, Minimum	2	Float	RO	Y	-	Amp	-	
1116	Current, B, Minimum	2	Float	RO	Y	-	Amp	-	
1118	Current, C, Minimum	2	Float	RO	Y	-	Amp	-	
1122	Voltage, A-N, Minimum	2	Float	RO	Y	-	Volt	-	
1124	Voltage, B-N, Minimum	2	Float	RO	Y	-	Volt	-	
1126	Voltage, C-N, Minimum	2	Float	RO	Y	-	Volt	-	
1128	Voltage, A-B, Minimum	2	Float	RO	Y	-	Volt	-	
1130	Voltage, B-C, Minimum	2	Float	RO	Y	-	Volt	-	
1132	Voltage, C-A, Minimum	2	Float	RO	Y	-	Volt	-	
1134	Current, A, THD Minimum	2	Float	RO	Y	-	%	0.0-1000.0	
1136	Current, B, THD Minimum	2	Float	RO	Y	-	%	0.0-1000.0	
1138	Current, C, THD Minimum	2	Float	RO	Y	-	%	0.0-1000.0	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B– 4: Register Listing—Min Max Values *(continued)*

Min Max values									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
1142	Voltage, A-N, THD Minimum	2	Float	RO	Y	-	%	0.0-1000.0	
1144	Voltage, B-N, THD Minimum	2	Float	RO	Y	-	%	0.0-1000.0	
1146	Voltage, C-N, THD Minimum	2	Float	RO	Y	-	%	0.0-1000.0	
1148	Voltage, A-B, THD Minimum	2	Float	RO	Y	-	%	0.0-1000.0	
1150	Voltage, B-C, THD Minimum	2	Float	RO	Y	-	%	0.0-1000.0	
1152	Voltage, C-A, THD Minimum	2	Float	RO	Y	-	%	0.0-1000.0	
1154	Real Power, Total Maximum	2	Float	RO	Y	-	kW	-	Absolute
1156	Apparent Power, Total Maximum	2	Float	RO	Y	-	kVA	-	
1158	Reactive Power, Total Maximum	2	Float	RO	Y	-	kVAR	-	Absolute
1160	Power Factor, Total Maximum	2	Float	RO	Y	-	-	0.0-1.0	Absolute
1162	Frequency Maximum	2	Float	RO	Y	-	Hz	45.0-65.0	
1164	Current, A, Maximum	2	Float	RO	Y	-	Amp	-	
1166	Current, B, Maximum	2	Float	RO	Y	-	Amp	-	
1168	Current, C, Maximum	2	Float	RO	Y	-	Amp	-	
1172	Voltage, A-N, Maximum	2	Float	RO	Y	-	Volt	-	
1174	Voltage, B-N, Maximum	2	Float	RO	Y	-	Volt	-	
1176	Voltage, C-N, Maximum	2	Float	RO	Y	-	Volt	-	
1178	Voltage, A-B, Maximum	2	Float	RO	Y	-	Volt	-	
1180	Voltage, B-C, Maximum	2	Float	RO	Y	-	Volt	-	
1182	Voltage, C-A, Maximum	2	Float	RO	Y	-	Volt	-	
1184	Current, A, THD Maximum	2	Float	RO	Y	-	%	0.0-1000.0	
1186	Current, B, THD Maximum	2	Float	RO	Y	-	%	0.0-1000.0	
1188	Current, C, THD Maximum	2	Float	RO	Y	-	%	0.0-1000.0	
1192	Voltage, A-N, THD Maximum	2	Float	RO	Y	-	%	0.0-1000.0	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B– 4: Register Listing—Min Max Values (continued)

Min Max values									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
1194	Voltage, B-N, THD Maximum	2	Float	RO	Y	-	%	0.0-1000.0	
1196	Voltage, C-N, THD Maximum	2	Float	RO	Y	-	%	0.0-1000.0	
1198	Voltage, A-B, THD Maximum	2	Float	RO	Y	-	%	0.0-1000.0	
1200	Voltage, B-C, THD Maximum	2	Float	RO	Y	-	%	0.0-1000.0	
1202	Voltage, C-A, THD Maximum	2	Float	RO	Y	-	%	0.0-1000.0	
4055	Real Power, Total Minimum	1	Integer	RO	Y	W	kW	0-32767	Absolute
4056	Apparent Power, Total Minimum	1	Integer	RO	Y	W	kVA	0-32767	
4057	Reactive Power, Total Minimum	1	Integer	RO	Y	W	kVAR	0-32767	Absolute
4058	Power Factor, Total Minimum	1	Integer	RO	Y	0.0001	-	0-10000	Absolute
4059	Frequency Minimum	1	Integer	RO	Y	0.01	Hz	4500-6500	
4060	Current, A, Minimum	1	Integer	RO	Y	I	Amp	0-32767	
4061	Current, B, Minimum	1	Integer	RO	Y	I	Amp	0-32767	
4062	Current, C, Minimum	1	Integer	RO	Y	I	Amp	0-32767	
4064	Voltage, A-N, Minimum	1	Integer	RO	Y	V	Volt	0-32767	
4065	Voltage, B-N, Minimum	1	Integer	RO	Y	V	Volt	0-32767	
4066	Voltage, C-N, Minimum	1	Integer	RO	Y	V	Volt	0-32767	
4067	Voltage, A-B, Minimum	1	Integer	RO	Y	V	Volt	0-32767	
4068	Voltage, B-C, Minimum	1	Integer	RO	Y	V	Volt	0-32767	
4069	Voltage, C-A, Minimum	1	Integer	RO	Y	V	Volt	0-32767	
4070	Current, A, THD Minimum	1	Integer	RO	Y	0.1	%	0-10000	
4071	Current, B, THD Minimum	1	Integer	RO	Y	0.1	%	0-10000	
4072	Current, C, THD Minimum	1	Integer	RO	Y	0.1	%	0-10000	
4074	Voltage, A-N, THD Minimum	1	Integer	RO	Y	0.1	%	0-10000	
4075	Voltage, B-N, THD Minimum	1	Integer	RO	Y	0.1	%	0-10000	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B– 4: Register Listing—Min Max Values (continued)

Min Max values									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
4076	Voltage, C-N, THD Minimum	1	Integer	RO	Y	0.1	%	0-10000	
4077	Voltage, A-B, THD Minimum	1	Integer	RO	Y	0.1	%	0-10000	
4078	Voltage, B-C, THD Minimum	1	Integer	RO	Y	0.1	%	0-10000	
4079	Voltage, C-A, THD Minimum	1	Integer	RO	Y	0.1	%	0-10000	
4080	Real Power, Total Maximum	1	Integer	RO	Y	W	kW	0-32767	Absolute
4081	Apparent Power, Total Maximum	1	Integer	RO	Y	W	kVA	0-32767	
4082	Reactive Power, Total Maximum	1	Integer	RO	Y	W	kVAR	0-32767	Absolute
4083	Power Factor, Total Maximum	1	Integer	RO	Y	0.0001	-	0-10000	Absolute
4084	Frequency Maximum	1	Integer	RO	Y	0.01	Hz	4500-6500	
4085	Current, A, Maximum	1	Integer	RO	Y	I	Amp	0-32767	
4086	Current, B, Maximum	1	Integer	RO	Y	I	Amp	0-32767	
4087	Current, C, Maximum	1	Integer	RO	Y	I	Amp	0-32767	
4089	Voltage, A-N, Maximum	1	Integer	RO	Y	V	Volt	0-32767	
4090	Voltage, B-N, Maximum	1	Integer	RO	Y	V	Volt	0-32767	
4091	Voltage, C-N, Maximum	1	Integer	RO	Y	V	Volt	0-32767	
4092	Voltage, A-B, Maximum	1	Integer	RO	Y	V	Volt	0-32767	
4093	Voltage, B-C, Maximum	1	Integer	RO	Y	V	Volt	0-32767	
4094	Voltage, C-A, Maximum	1	Integer	RO	Y	V	Volt	0-32767	
4095	Current, A, THD Maximum	1	Integer	RO	Y	0.1	%	0-10000	
4096	Current, B, THD Maximum	1	Integer	RO	Y	0.1	%	0-10000	
4097	Current, C, THD Maximum	1	Integer	RO	Y	0.1	%	0-10000	
4099	Voltage, A-N, THD Maximum	1	Integer	RO	Y	0.1	%	0-10000	
4100	Voltage, B-N, THD Maximum	1	Integer	RO	Y	0.1	%	0-10000	
4101	Voltage, C-N, THD Maximum	1	Integer	RO	Y	0.1	%	0-10000	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B- 4: Register Listing—Min Max Values *(continued)*

Min Max values									
Reg	Name	Size	Type	Access	NV	Scale	Units	Range	Notes
4102	Voltage, A-B, THD Maximum	1	Integer	RO	Y	0.1	%	0-10000	
4103	Voltage, B-C, THD Maximum	1	Integer	RO	Y	0.1	%	0-10000	
4104	Voltage, C-A, THD Maximum	1	Integer	RO	Y	0.1	%	0-10000	
RO = Read Only R/W = Read/Write NV = Nonvolatile.									

Table B– 5: Register Listing—Reset Commands

Reset Commands—Write commands to Register 4126.		
Command	Parameters	Notes
666		Restart demand metering
6209	Register: Energy value to appear in register: 7016 4000 7017 4001 7018 4002 7019 4003 7020 4004 7021 4005	Preset Energy Values
10001		Clear the Usage Timers. (Set to 0)
14255		Reset all Min/Max Values. (Sets values to defaults)
21212		Reset Peak Demand values. (Set to 0)
30078		Clear all Energy Accumulators. (Set to 0)

NOTE: Register List is based on Firmware versions 2.020

SUPPORTED MODBUS COMMANDS

Table B– 6: Modbus Commands

Command	Description
0x03	Read holding registers
0x04	Read input registers
0x06	Preset single registers
0x10	Preset multiple registers
0x11	Report ID Return String byte 1: 0x11 byte 2: number of bytes following without crc byte 3: ID byte = 250 byte 4: status = 0xFF bytes 5+: ID string = PM710 Power Meter last 2 bytes: CRC
0x2B	Read device identification, BASIC implementation (0x00, 0x01, 0x02 data), conformity level 1, Object Values 0x01: If register 4128 is 0, then "Merlin Gerin. If register 4128 is 1, then "Square D" 0x02: "PM710" 0x03: "Vxx.yyy" where xx.yyy is the OS version number. This is the reformatted version of register 7001. If the value for register 7001 is 12345, then the 0x03 data would be "V12.345"

APPENDIX C—INSTRUMENT TRANSFORMER WIRING: TROUBLESHOOTING GUIDE

Abnormal readings in an installed meter can sometimes signify improper wiring. This appendix is provided as an aid in troubleshooting potential wiring problems.

NOTE



The information in this appendix is intended to be general in nature and covers a variety of metering devices.

The Power Meter 710 does not display **signed** readings for Power, Energy, or Power Factor. Throughout this appendix, when values are stated in terms of positive, negative, or lagging, for the Power Meter 710, those readings are absolute.

SECTION I: USING THIS GUIDE

The following sections contain "Case" tables showing a variety of symptoms and probable causes. The symptoms listed are "ideal," and some judgment should be exercised when troubleshooting. For example, if the kW reading is 25, but you know that it should be about 300 kW, go to a table where "kW = 0" is listed as one of the symptoms.

"Section II: Common Problems for 3-Wire and 4-Wire Systems" addresses symptoms and possible causes that occur regardless of system type. Check this section first. If the symptoms are more complicated, proceed to "Section III: 3-Wire System Troubleshooting" or "Section IV: 4-Wire System Troubleshooting" as is appropriate.

Because it is nearly impossible to address all combinations of multiple wiring mistakes or other problems that can occur (e.g., blown PT fuses, missing PT neutral ground connection, etc.), this guide generally addresses only one wiring problem at a time.

Before trying to troubleshoot wiring problems, it is imperative that all instantaneous readings be available for reference. Specifically those readings should include the following:

- line-to-line voltages
- line-to-neutral voltages
- phase currents
- power factor
- kW
- kVAR
- kVA

What is Normal?

Most power systems have a lagging (inductive) power factor. The only time a leading power factor is expected is if power factor correction capacitors are switched in or over-excited synchronous motors with enough capacitive kVARs on-line to overcorrect the power factor to leading. Some uninterruptable power supplies (UPS) also produce a leading power factor.

"Normal" lagging power system readings are as follows:

- $kW = \sqrt{3} \times V_{AB} \times I_{3\Phi A_{vg}} \times PF_{3\Phi A_{vg}} / 1000$
- $kVAR = (\sqrt{(kVA)^2 - (kW)^2})$

- $kVA = \sqrt{3} \times V_{AB} \times I_{3\Phi Avg} / 1000$
- $PF_{3\Phi Avg}$ = lagging in the range 0.70 to 1.00 (for 4-wire systems, all phase PFs are about the same)
- Phase currents approximately equal
- Phase voltages approximately equal

A quick check for proper readings consists of kW comparisons (calculated using the equation above and compared to the meter reading) and a reasonable lagging 3-phase average power factor reading. If these checks are okay, there is little reason to continue to check for wiring problems.

SECTION II: COMMON PROBLEMS FOR 3-WIRE AND 4-WIRE SYSTEMS

Table C– 1: Section II—Case A

Symptoms: 3-Wire and 4-Wire	Possible Causes
<ul style="list-style-type: none"> • Zero amps • Zero kW, kVAR, kVA 	<ul style="list-style-type: none"> • CT secondaries shorted • Less than 2% load on power meter based on CT ratio <p>Example: with 100/5 CT's, at least 2A must flow through CT window for power meter to "wake up"</p>

Table C– 2: Section II—Case B

Symptoms: 3-Wire and 4-Wire	Possible Causes
<ul style="list-style-type: none"> • Negative kW of expected magnitude • Positive kVAR • Normal lagging power factor <p>(See "NOTE" on page 37.)</p>	<ul style="list-style-type: none"> • All three CT polarities backwards; could be CTs are physically mounted with primary polarity mark toward the load instead of toward source or secondary leads swapped • All three PT polarities backwards; again, could be on primary or secondary <p>NOTE: Experience shows CTs are usually the problem.</p>

Table C– 3: Section II—Case C

Symptoms: 3-Wire and 4-Wire	Possible Causes
<ul style="list-style-type: none"> • Frequency is an abnormal value; may or may not be a multiple of 50/60 Hz. 	<ul style="list-style-type: none"> • PTs primary and/or secondary neutral common not grounded (values as high as 275 Hz and as low as 10 Hz have been seen) • System grounding problem at the power distribution transformer (such as utility transformer), though this is not likely

**SECTION III: 3-WIRE SYSTEM
TROUBLESHOOTING****Table C– 4: Section III—Case A**

Symptoms: 3-Wire	Possible Causes
<ul style="list-style-type: none">• Currents and voltages approximately balanced• kW = near 0• kVAR = near 0• PF can be any value, probably fluctuating	<ul style="list-style-type: none">• CT secondary leads are swapped (A-phase lead on C-phase terminal and vice versa)• PT secondary leads are swapped (A-phase lead on C-phase terminal and vice versa)

Table C– 5: Section III—Case B

Symptoms: 3-Wire	Possible Causes
<ul style="list-style-type: none">• Phase B current is $\sqrt{3}$ higher than A and C (except in System Type 31)• kVA = about half of the expected magnitude• kW and kVAR can be positive or negative, less than about half of the expected magnitude• PF can be any value, probably a low leading value	<ul style="list-style-type: none">• One CT polarity is backwards

Table C– 6: Section III—Case C

Symptoms: 3-Wire	Possible Causes
<ul style="list-style-type: none">• V_{CA} is $\sqrt{3}$ higher than V_{AB} and V_{BC}• kVA = about half of the expected magnitude• kW and kVAR can be positive or negative, less than about half of the expected magnitude• PF can be any value, probably a low leading value	<ul style="list-style-type: none">• One PT polarity is backwards

Table C– 7: Section III—Case D

Symptoms: 3-Wire	Possible Causes
<ul style="list-style-type: none">• kW = 0 or low, with magnitude less than kVAR• kVAR = positive or negative with magnitude of close to what is expected for kW• kVA = expected magnitude• PF = near 0 up to about 0.7 lead (See "NOTE" on page 37.)	<ul style="list-style-type: none">• Either the two voltage leads are swapped OR the two current leads are swapped AND one instrument transformer has backwards polarity (look for $V_{CA} = \sqrt{3}$ high or phase B current = $\sqrt{3}$ high)• The power meter is metering a purely capacitive load (this is unusual); in this case kW and kVAR will be positive and PF will be near 0 lead

Table C– 8: Section III—Case E

Symptoms: 3-Wire	Possible Causes
<ul style="list-style-type: none"> One phase current reads 0 kVA = about 1/2 of the expected value kW, kVAR, and power factor can be positive or negative of any value <p>(See "NOTE" on page 37.)</p>	<ul style="list-style-type: none"> The CT on the phase that reads 0 is short-circuited Less than 2% current (based on CT ratio) flowing through the CT on the phase that reads 0

SECTION IV: 4-WIRE SYSTEM TROUBLESHOOTING

Table C– 9: Section IV—Case A

Symptoms: 4-Wire	Possible Causes
<ul style="list-style-type: none"> kW = 1/3 of the expected value kVAR = 1/3 of the expected value power factor = 1/3 of the expected value All else is normal 	<ul style="list-style-type: none"> One CT polarity is backwards <p><i>NOTE: The only way this problem will usually be detected is by the Quick Check procedure. It is very important to always calculate kW. In this case, it is the only symptom and will go unnoticed unless the calculation is done or someone notices backwards CT on a waveform capture.</i></p>

Table C– 10: Section IV—Case B

Symptoms: 4-Wire	Possible Causes
<ul style="list-style-type: none"> kW = 1/3 of the expected value kVAR = 1/3 of the expected value 2 of the 3 line-to-line voltages are $\sqrt{3}$ low power factor = 1/3 of the expected value All else is normal 	<ul style="list-style-type: none"> One PT polarity is backwards <p><i>NOTE: The line-to-line voltage reading that does not reference the PT with backwards polarity will be the only correct reading.</i> Example: $V_{AB} = 277$, $V_{BC} = 480$, $V_{CA} = 277$</p> <p>In this case, the A-phase PT polarity is backwards. V_{BC} is correct because it does not reference V_A.</p>

Table C– 11: Section IV—Case C

Symptoms: 4-Wire	Possible Causes
<ul style="list-style-type: none"> One line-to-neutral voltage is zero 2 of the 3 line-to-line voltages are $\sqrt{3}$ low kW = 2/3 of the expected value kVAR = 2/3 of the expected value kVA = 2/3 of the expected value Power factor may look abnormal 	<ul style="list-style-type: none"> PT metering input missing (blown fuse, open phase disconnect, etc.) on the phase that reads zero. <p><i>NOTE: The line-to-line voltage reading that does not reference the missing PT input will be the only correct reading.</i> Example: $V_{AB} = 277$, $V_{BC} = 277$, $V_{CA} = 480$</p> <p>In this case, the B-phase PT input is missing. V_{CA} is correct because it does not reference V_B.</p>

Table C– 12: Section IV—Case D

Symptoms: 4-Wire	Possible Causes
<ul style="list-style-type: none">3-phase kW = 2/3 of the expected value3-phase kVAR = 2/3 of the expected value3-phase kVA = 2/3 of the expected valueOne phase current reads 0All else is normal	<ul style="list-style-type: none">The CT on the phase that reads 0 is short-circuitedLess than 2% current (based on CT ratio) flowing through the CT on the phase that reads 0

Table C– 13: Section IV—Case E

Symptoms: 4-Wire	Possible Causes
<ul style="list-style-type: none">kW = near 0kVA = near 03-phase average power factor flip-flopping lead and lagVoltages, currents, and kVA are normal	<ul style="list-style-type: none">Two CT secondary leads are swapped (A-phase on B-phase terminal, for example)Two PT secondary leads are swapped (A-phase on B-phase terminal, for example) <p><i>NOTE: In either case, the phase input that is not swapped will read normal lagging power factor.</i></p>

Table C– 14: Section IV—Case F

Symptoms: 4-Wire	Possible Causes
<ul style="list-style-type: none">kW = negative and less than kVARKVAR = negative and close to value expected for kWkVA = expected valuePower factor low and leadingVoltages and currents are normal	<ul style="list-style-type: none">All three PT lead connections “rotated” counterclockwise: A-phase wire on C-phase terminal, B-phase wire on A-phase terminal, C-phase wire on B-phase terminal.All three CT lead connections “rotated” clockwise: A-phase wire on B-phase terminal, B-phase wire on C-phase terminal, C-phase wire on A-phase terminal.

Table C– 15: Section IV—Case G

Symptoms: 4-Wire	Possible Causes
<ul style="list-style-type: none">kW = negative and less than kVARkVAR = positive and close to the value for kW <p><i>NOTE: looks like kW and kVAR swapped places</i></p> <ul style="list-style-type: none">kVA = expected valuePower factor low and laggingVoltages and currents are normal	<ul style="list-style-type: none">All three PT lead connections “rotated” clockwise: A-phase wire on B-phase terminal, B-phase wire on C-phase terminal, C-phase wire on A-phase terminal.All three CT lead connections “rotated” counterclockwise: A-phase wire on C-phase terminal, B-phase wire on A-phase terminal, C-phase wire on B-phase terminal.

FIELD EXAMPLE

Readings from a 4-wire system

- kW= 25
- kVAR= -15 *
- kVA= 27
- I_A = 904A
- I_B = 910A
- I_C = 931A
- $I_{3\Phi Avg}$ = 908A
- V_{AB} = 495V
- V_{BC} = 491V
- V_{CA} = 491V
- V_{AN} = 287V
- V_{BN} = 287V
- V_{CN} = 284V
- $PF_{3\Phi Avg}$ = 0.75 lag to 0.22 lead fluctuating*

Troubleshooting Diagnosis

- Power factors cannot be correct
- None of the “Section II” symptoms exist, so proceed to the 4-wire troubleshooting (“Section IV”)
- Cannot calculate kW because 3-phase power factor cannot be right, so calculate kVA instead
- Calculated kVA
$$= \sqrt{3} \times V_{ab} \times I_{3\Phi Avg} / 1000$$
$$= 1.732 \times 495 \times 908 / 1000$$
$$= 778 \text{ kVA}$$
- Power meter reading is essentially zero compared to this value
- 4-wire Case E looks similar
- Since the PTs were connected to other power meters which were reading correctly, suspect two CT leads swapped
- Since A-phase power factor is the only one that has a normal looking lagging value, suspect B and C-phase CT leads may be swapped*
- After swapping B and C-phase CT leads, all readings went to the expected values; problem solved

*See “NOTE” on page 37.

GLOSSARY

TERMS

absolute energy—both energy in and out of the load are treated as additive.

absolute power—both power in and out of the load are treated as additive.

accumulated energy—energy can accumulate in either signed or unsigned (absolute) mode. In signed mode, the direction of power flow is considered and the accumulated energy magnitude may increase and decrease. In absolute mode, energy accumulates as a positive regardless of the power flow direction.

active alarm—an alarm that has been set up to trigger the execution of a task or notification when certain conditions are met. An icon in the upper-right corner of the meter indicates that an alarm is active (▲). See also *enabled alarm* and *disabled alarm*.

baud rate—specifies how fast data is transmitted across a network port.

block interval demand—power demand calculation method for a block of time and includes three ways to apply calculating to that block of time using the sliding block, fixed block, or rolling block method.

communications link—a chain of devices connected by a communications cable to a communications port.

current transformer (CT)—current transformer for current inputs.

demand—average value of a quantity, such as power, over a specified interval of time.

device address—defines where the power meter resides in the power monitoring system.

event—the occurrence of an alarm condition, such as *Undervoltage Phase A*, configured in the power meter.

firmware—operating system within the power meter

fixed block—an interval selected from 1 to 60 minutes (in 1-minute increments). The power meter calculates and updates the demand at the end of each interval.

float—a 32-bit floating point value returned by a register. The upper 16-bits are in the lowest-numbered register pair. For example, in the register 4010/11, 4010 contains the upper 16-bits while 4011 contains the lower 16-bits.

frequency—number of cycles in one second.

line-to-line voltages—measurement of the rms line-to-line voltages of the circuit.

line-to-neutral voltages—measurement of the rms line-to-neutral voltages of the circuit.

maximum demand current—highest demand current measured in amperes since the last reset of demand.

maximum demand real power—highest demand real power measured since the last reset of demand.

maximum demand voltage—highest demand voltage measured since the last reset of demand.

maximum demand—highest demand measured since the last reset of demand.

maximum value—highest value recorded of the instantaneous quantity such as Phase A Current, Phase A Voltage, etc., since the last reset of the minimums and maximums.

minimum value—lowest value recorded of the instantaneous quantity such as Phase A Current, Phase A Voltage, etc., since the last reset of the minimums and maximums.

nominal—typical or average.

parity—refers to binary numbers sent over the communications link. An extra bit is added so that the number of ones in the binary number is either even or odd, depending on your configuration). Used to detect errors in the transmission of data.

phase currents (rms)—measurement in amperes of the rms current for each of the three phases of the circuit. See also *maximum value*.

phase rotation—refers to the order in which the instantaneous values of the voltages or currents of the system reach their maximum positive values. Two phase rotations are possible: A-B-C or A-C-B.

potential transformer (PT)—also known as a voltage transformer.

power factor (PF)—true power factor is the ratio of real power to apparent power using the complete harmonic content of real and apparent power. Calculated by dividing watts by volt amperes. Power factor is the difference between the total power your utility delivers and the portion of total power that does useful work. Power factor is the degree to which voltage and current to a load are out of phase.

real power—calculation of the real power (3-phase total and per-phase real power calculated) to obtain kilowatts.

rms—root mean square. Power meters are true rms sensing devices.

rolling block—a selected interval and subinterval that the power meter uses for demand calculation. The subinterval must divide evenly into the interval to the second. Demand is updated at each subinterval, and the power meter displays the demand value for the last completed interval.

scale factor—multipliers that the power meter uses to make values fit into the register where information is stored.

safety extra low voltage (SELV) circuit—a SELV circuit is expected to always be below a hazardous voltage level.

short integer—a signed 16-bit integer.

sliding block—an interval selected from 1 to 60 minutes (in 1-minute increments). If the interval is between 1 and 15 minutes, the demand calculation updates every 15 seconds. If the interval is between 16 and 60 minutes, the demand calculation updates every 60 seconds. The power meter displays the demand value for the last completed interval.

system type—a unique code assigned to each type of system wiring configuration of the power meter.

thermal demand—demand calculation based on thermal response.

Total Harmonic Distortion (THD or thd)—indicates the degree to which the voltage or current signal is distorted in a circuit.

total power factor—see *power factor*.

true power factor—see *power factor*.

unsigned integer—an unsigned 16-bit integer.

unsigned long integer—an unsigned 32-bit value returned by a register. The upper 16-bits are in the lowest-numbered register pair. For example, in the register pair 4010 and 4011, 4010 contains the upper 16-bits while 4011 contains the lower 16-bits.

ABBREVIATIONS

A	Ampere
ADDR	Power meter address
AMPS	Amperes
BARGR	Bargraph
COMMS	Communications
CPT	Control Power Transformer
CT	—see <i>current transformer</i> on page 43
DMD	Demand
DOM	Date of Manufacturing
F	Frequency
HZ	Hertz
I	Current
IMAX	Current maximum demand
kVA	Kilovolt-Ampere
kVAD	Kilovolt-Ampere demand
kVAR	Kilovolt-Ampere reactive
kVARD	Kilovolt-Ampere reactive demand
kVARH	Kilovolt-Ampere reactive hour
kW	Kilowatt
kWD	Kilowatt demand
kWH	Kilowatthours
kWH/P	Kilowatthours per pulse
kWMAX	Kilowatt maximum demand
MAINT	Maintenance screen
MBUS	MODBUS
MIN	Minimum
MINMX	Minimum and maximum values
MSEC	Milliseconds
MVAh	Megavolt ampere hour
MVARh	Megavolt ampere reactive hour
MWh	Megawatt hour
O.S.	Operating System (firmware version)
P	Real power
PAR	Parity
PASSW	Password
Pd	Real power demand
PF	Power factor
Ph	Real energy
PM	Power meter
PQS	Real, reactive, apparent power
PQSD	Real, reactive, apparent power demand
PRIM	Primary
PT	Number of voltage connections (see <i>potential transformer</i> on page 44)

PWR—Power
Q—Reactive power
Qd—Reactive power demand
Qh—Reactive energy
R.S.—Firmware reset system version
S—Apparent power
S.N.—Power meter serial number
SCALE—see *scale factor* on page 44
Sd—Apparent power demand
SECON—Secondary
SEC—Secondary
Sh—Apparent Energy
SUB-I—Subinterval
THD—Total Harmonic Distortion
U—Voltage line to line
V—Voltage
VAR—volt ampere reactive.
VMAX—Maximum voltage
VMIN—Minimum voltage

INDEX

B

block interval demand method 17

C

communications
 functions 16
 setup 11

CT

 setup 8, 11

D

default password 7
demand
 current 19
 thermal 19
demand current calculation 19
demand power
 calculation 17
demand readings 16
 demand current 19
diagnostics
 password 10
display
 menu overview 6
 operating 5

E

energy
 password 10
energy readings 19

F

firmware 2
fixed block 17

M

menu 6
metered values
 demand readings 16
 energy readings 19
 real-time readings 15
minimum/maximum
 password 10

P

password
 default 7
 diagnostics 10
 energy 10
 minimum/maximum 10
 setup 10
peak demand calculation 19
power analysis values 20
power factor
 min/max conventions 16
power meter
 accessories 2
 firmware 2
 hardware 1
 setup 7
 specifications 23

PT

 setup 8, 11

R

readings
 demand 16
real-time readings 15
 min/max values 16
register list 25
resets
 of peak demand values 19
rolling block 17

S

setup 7
 communications 11
 CT 8, 11
 demand current power 9
 password 10
 PTs 8, 11
sliding block 17

T

thermal demand method 19
troubleshooting 21
 instrument transformer wiring 37

Schneider Electric

Power Monitoring and Control
295 Tech Park Drive, Suite 100
Lavergne, TN 37086
Tel: 1-615-287-3400

2195 Keating Cross Road
Saanichton, BC
Canada V8M 2A5
Tel: 1-250-652-7100

Electropole (38 EQI)
31, rue Pierre Mendes France
F - 38050 Grenoble Cedex 9
Tel: +33 (0) 4 76 57 60 60

Getting technical support:
Contact your local Schneider Electric sales
representative for assistance or go to the
www.powerlogic.com website.

PowerLogic is a trademark or registered trademark of Schneider Electric in the USA,
France and other countries.

Electrical equipment should be installed, operated, serviced, and maintained only by
qualified personnel. No responsibility is assumed by Schneider Electric for any
consequences arising out of the use of this material.

63230-501-209A1 07/2008
All Rights Reserved